



MADE IN U.S.A.

YAZOO

Parts Manual for

S22MB1 SERIES 22" BIG WHEEL MOWER




YAZOO

*"Something worth
shouting about!"*

Yazoo Manufacturing Company's policy is to improve its products whenever it is possible and practical to do so. In an effort to keep pace with changes in technology, Yazoo reserves the right to make changes or improvements at any time without incurring any obligation to make such changes on products previously manufactured.

HANDLE ASSEMBLY

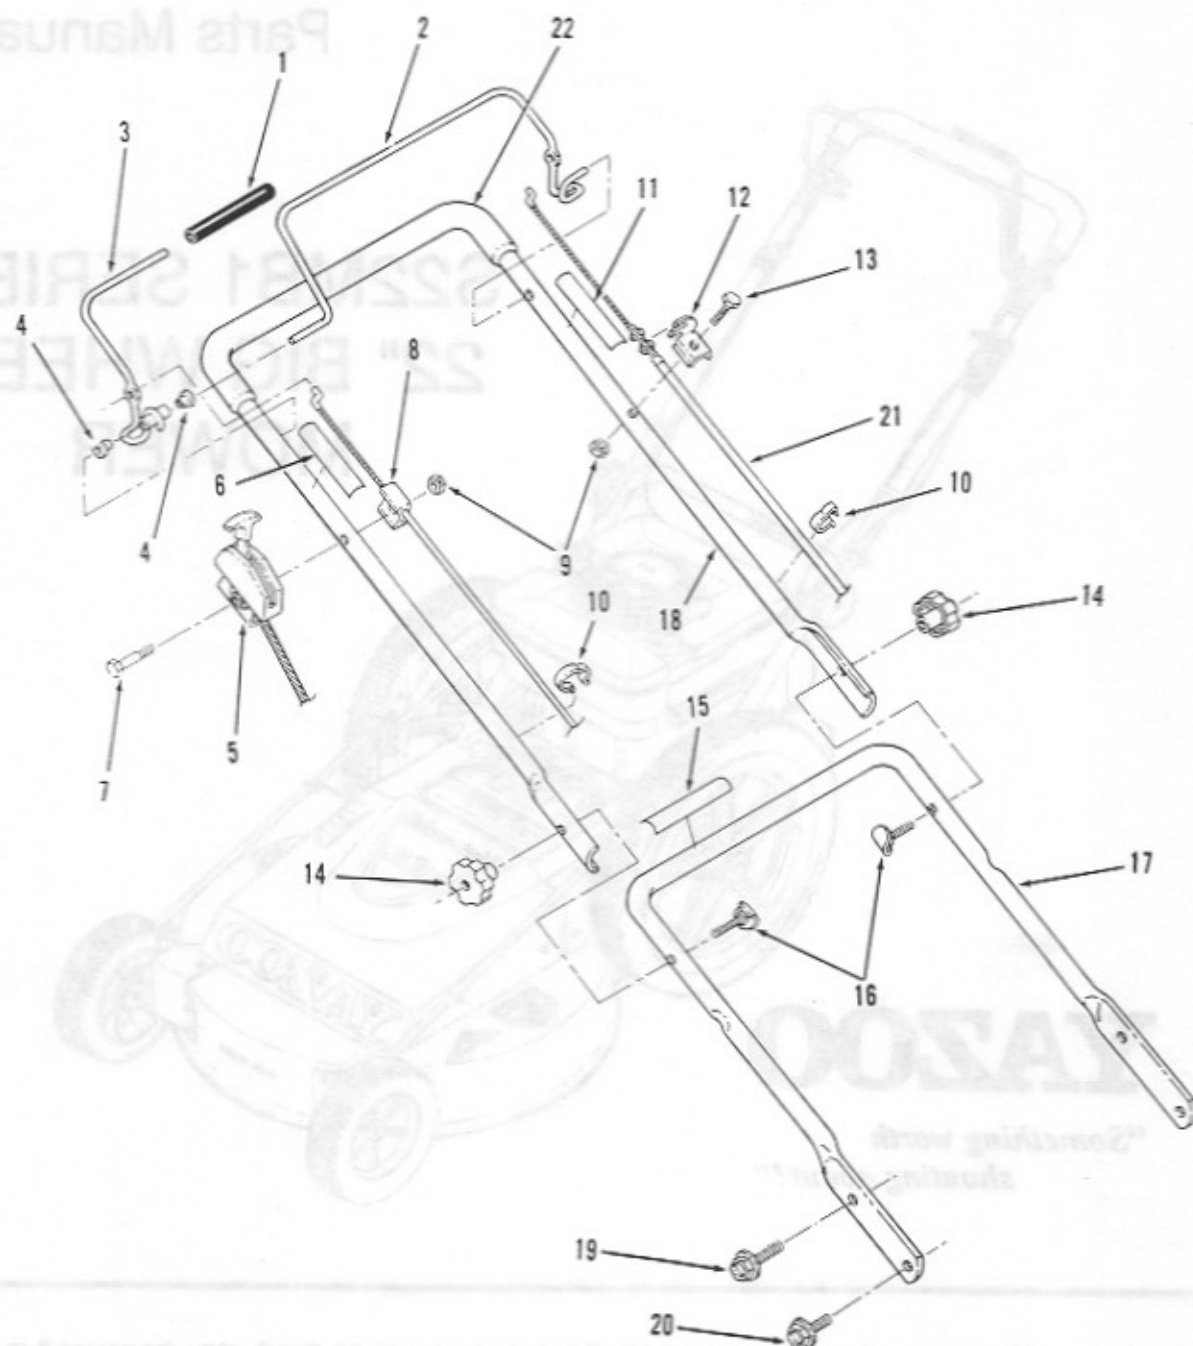


Yazoo Manufacturing Company's policy is to improve its products whenever it is possible and practical to do so. In an effort to keep pace with changes in technology, Yazoo reserves the right to make changes or improvements at any time without incurring any obligation to make such changes on products previously manufactured.

HANDLE ASSEMBLY

ITEM	PART NO.	DESCRIPTION
1	0703-023	GRIP, 5/16"
2	1201-112	Bail, Engine
3	1201-111	Bail, Clutch
4	0204-085	Bushing, 5/16 Nylon (2)
5	0301-150	Control, Throttle
6	0401-394	Decal, Traction
7	0209-045	HHCS, 1/4"Cx1-3/4G5
8	0301-152	Cable, Clutch
9	1401-009	Nut, 1/4" Lock (2)
10	0309-020	Clamp, Cable (3)
11	0401-395	Decal, Engine Kill
12	0214-515	Mount, Engine Cable
13	0209-032	HHCS, 1/4Cx1-1/4G5
14	1104-020	Knob, 5/16C (2)
15	0401-399	Decal, Stabilize Machine
16	0209-835	CVHB, 5/16Cx2 (2)
17	0801-024	Handle, Lower
18	0801-023	Handle, Upper
19	0209-084	HWST, 5/16Cx5/8 (2)
20	0209-080	HWST, 5/16Cx3/4 (2)
21	0301-151	Cable, Engine
22	0703-038	Grip, Handle

MOWER DECK ASSEMBLY

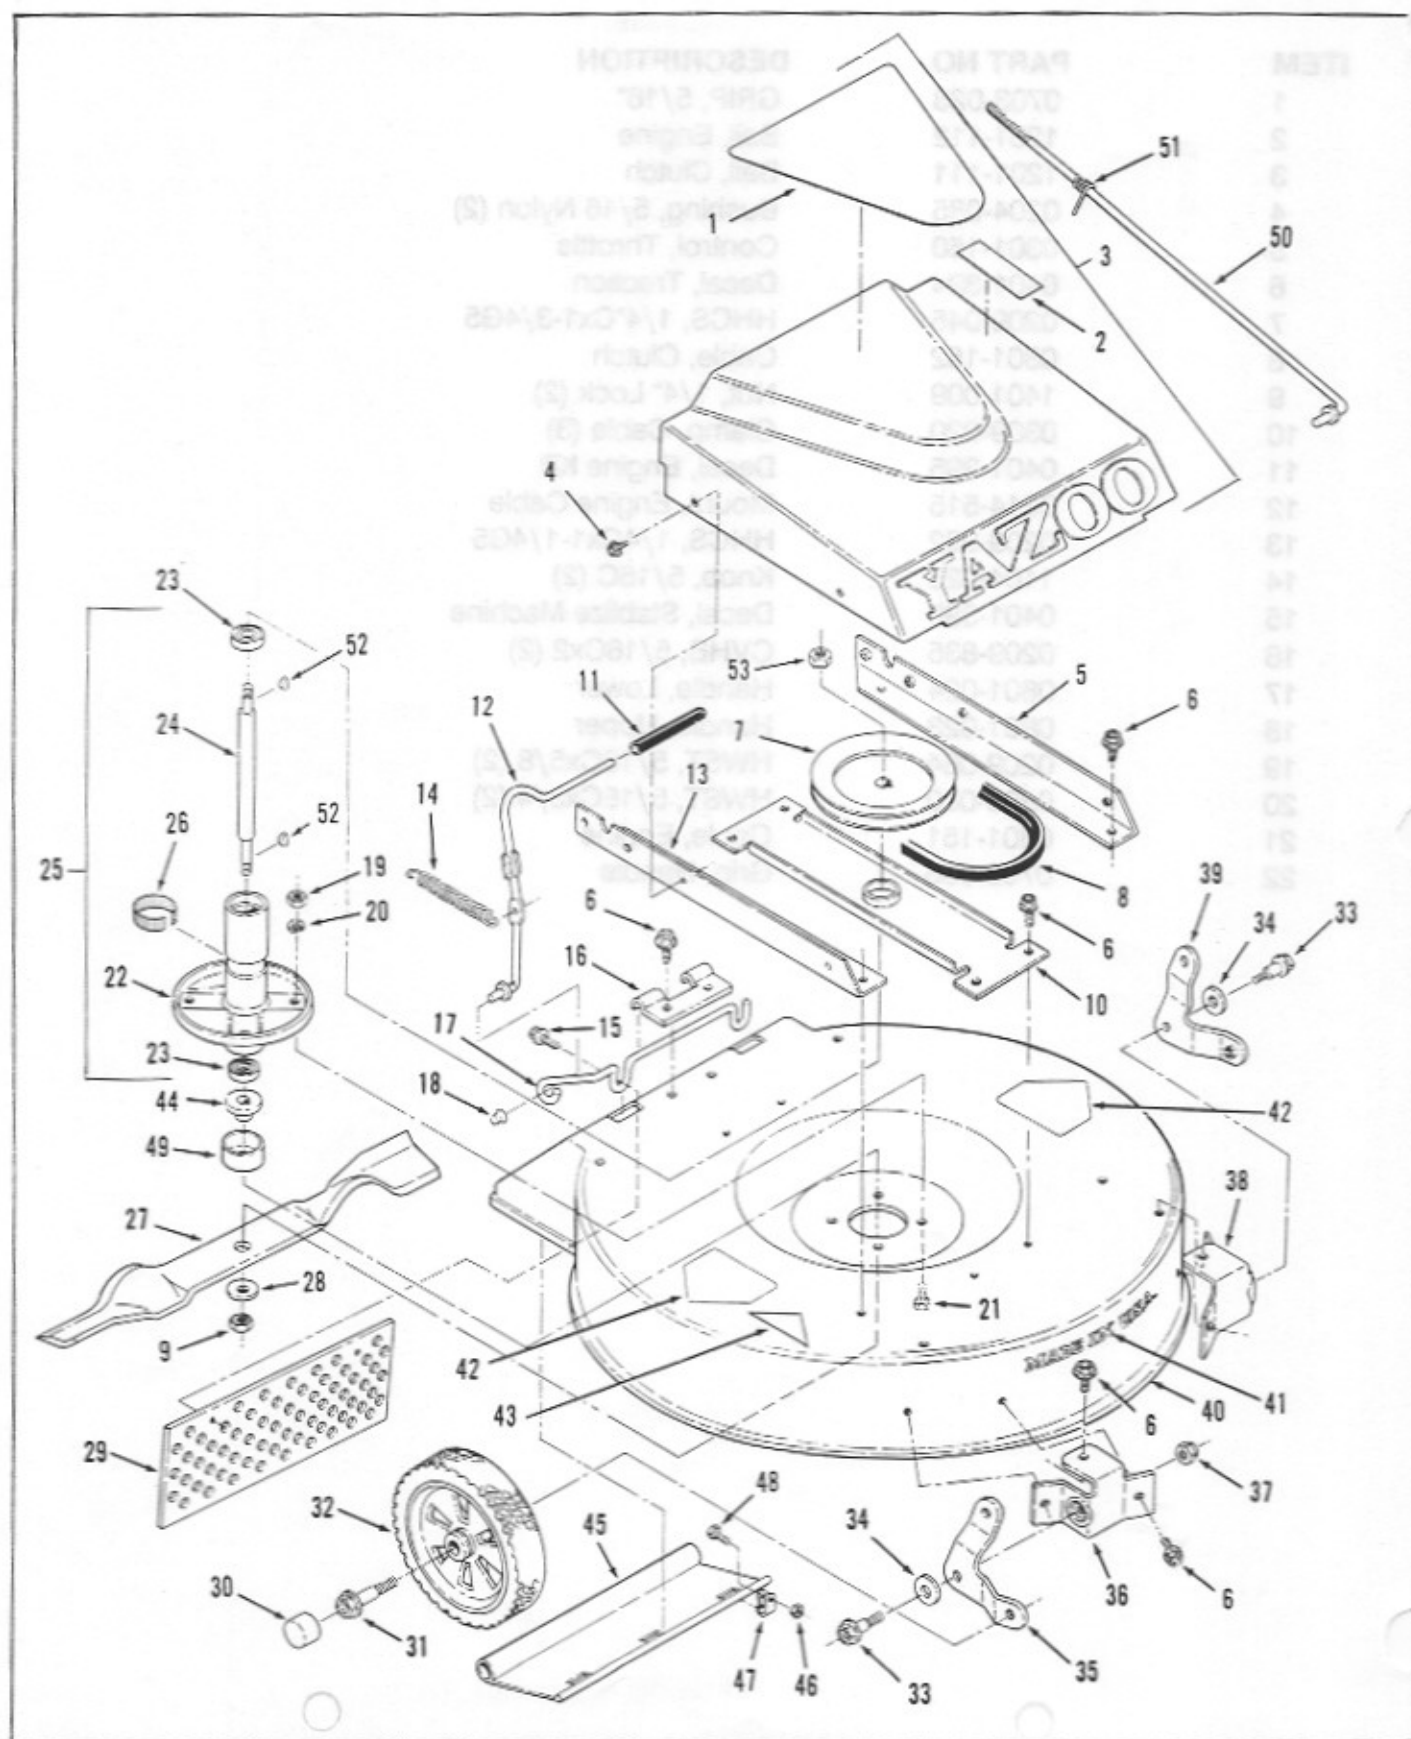

MOWER DECK ASSEMBLY

ITEM	PART NO.	DESCRIPTION
1	0401-403	Decal, Vari-Mulch
2	0401-398	Decal, Cutting Height
3	0804-093	Hood (Includes Decals)
4	0209-085	HWST, 1/4Cx1/2 (4)
5	0214-512	Rail, LH
6	0209-084	HWST, 5/16Cx5/8 (16)
7	1608-167	Pulley, Spindle
8	0205-010	Belt, Deck / Spindle
9	1401-069	Nut, 5/8F Jam
10	0213-053	Brace, Spindle
11	0703-037	Grip, 3/8
12	1808-317	Rod, Mulcher Control
13	0214-511	Rail, RH
14	1916-140	Spring
15	0209-080	HWST, 5/16Cx3/4
16	1303-031	Hinge, Mulcher
17	1808-316	Pivot, Mulcher
18	1401-129	Pushnut, 3/8"
19	1401-020	Nut, 5/16 Hex (4)
20	2301-004	Washer, 5/16 Lock (4)
21	0209-108	HHCS, 5/16Cx3/4G5 (4)
22	0806-233	Housing, Spindle Weldment
23	0204-019	Bearing, Spindle (2)
24	1904-294	Shaft, Spindle
25	0806-341	Housing, Spindle Asm.
26	1806-148	Ring, Tolerance
27	0206-950	Blade, 22" Mulch
28	2301-096	Washer, Bevel
29	1303-029	Plate, Mulcher
30	0303-087	Cap, Wheel Hub (2)
31	0209-083	Bolt, Shoulder (2)
32	2302-009	Wheel, 8x1.75 (2)
33	0209-082	Bolt, Shoulder (2)
34	2301-016	Washer, 1/2" Bevel (2)
35	0214-510	Adjuster, Height RH
36	0214-513	Mount, Wheel RH
37	1401-132	Nut, 3/8C Nyloc (2)
38	0214-514	Mount, Wheel LH
39	0214-509	Adjuster, Height LH
40	0402-011	Deck, 22" Mower
41	0401-118	Decal, USA
42	0401-111	Decal, Cut Finger (2)
43	0401-220	Decal, OPEI-90
44	0101-163	Adapter, Blade
45	0609-015	Flap, Drag
46	1401-009	Nut, 1/4C Lock (3)
47	0309-050	Clip, Drag Flap (3)
48	0209-021	HHCS, 1/4C x 3/4 G5 (3)
49	0314-034	Shield, Dust
50	1808-314	Link, Front Lift (2)
51	0902-005	Indicator, Cut
52	1102-013	Key, 3/16 Woodruff (2)
53	1401-070	Nut, 5/8F Centerlock Half

Replaced by ~~Kit#~~

~~1107-019~~

1107-027


housing 0806-354

bearing 0204-019

shaft 1904-317

brace 0213-059

DRIVE & HEIGHT ADJUSTMENT ASSEMBLY

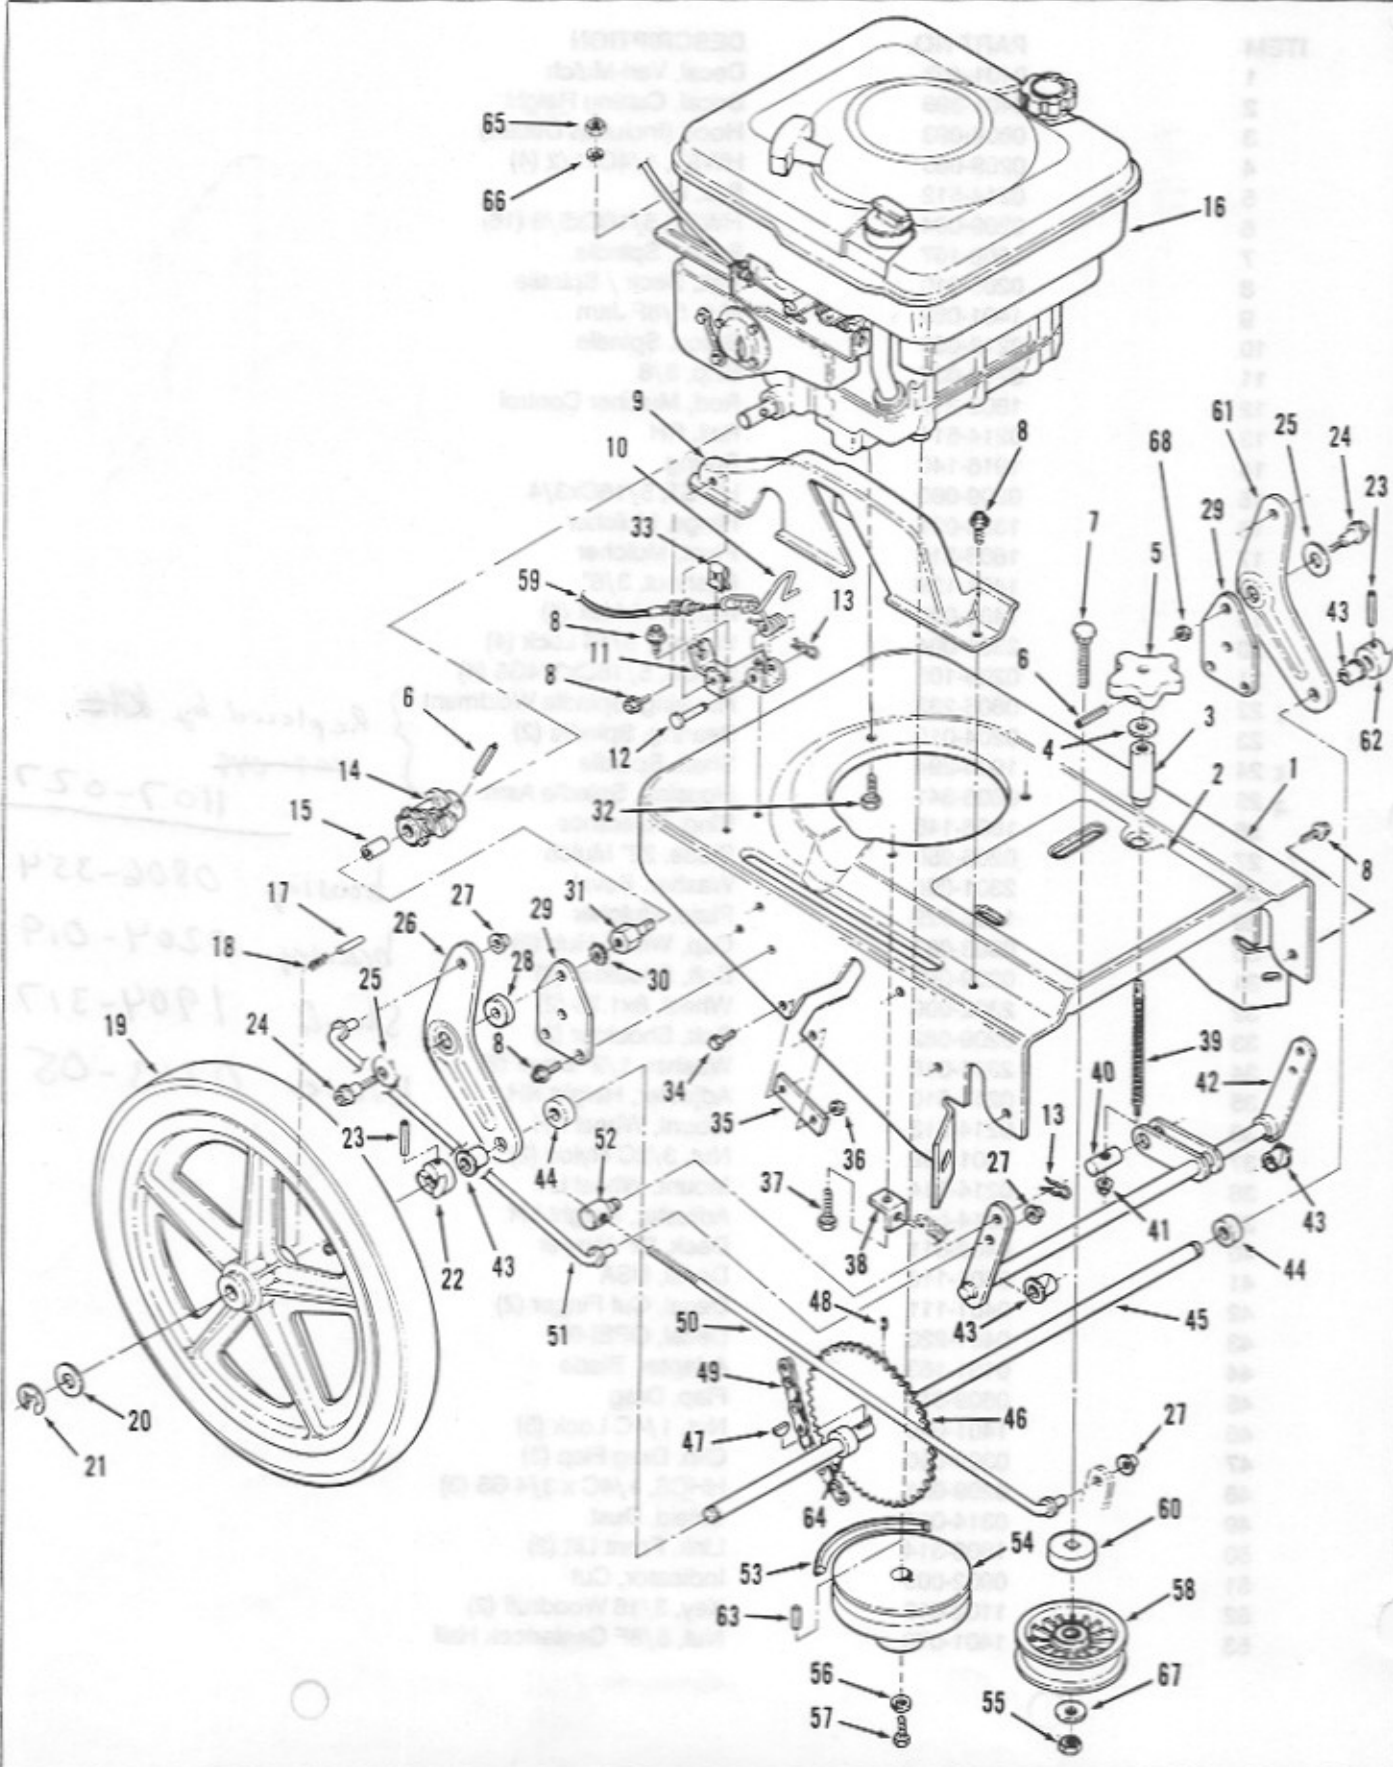

DRIVE & HEIGHT ADJUSTMENT ASSEMBLY

ITEM	PART NO.	DESCRIPTION	ITEM	PART NO.	DESCRIPTION
1	0402-012	Deck, Rear	54	1608-168	Pulley, Engine
2	0401-396	Decal, Mulch	55	1401-031	Nut, 3/8C Lock
3	1913-101	Spacer, Lift Screw	56	2301-006	Washer, 3/8 Lock
4	0215-184	Bushing, 1/2" Machinery	57	0209-318	HHCS, 3/8F x 1 G5
5	1104-019	Knob, Lift	58	1608-169	Pulley, Idler
6	1604-014	Pin, Roll 3/16 x 1-1/4 (2)	59	0301-152	Cable, Clutch
7	0209-325	Bolt, Carriage 3/8C x 2-1/2	60	1913-299	Spacer, Idler
8	0209-084	HWST, 5/16C x 5/8 (14)	61	0214-507	Mount, Rear Wheel LH
9	0704-017	Guard, Chain	62	1803-017	Ratchet, LH
10	1916-186	Spring, Clutch	63	1102-019	Key, 3/16 Sq. x 1-1/4
11	0214-516	Mount, Clutch Stop	64	1913-300	Spacer, Sprocket
12	1604-167	Pin, Clutch Stop	65	1401-020	Nut, 5/16C Hex (3)
13	0309-063	Clip, 3/8 Pin (3)	66	2301-004	Washer, 5/16 Lock (3)
14	0310-007	Clutch	67	2301-022	Washer, 3/8 Flat
15	0204-087	Bushing, Bronze	68	1401-032	Nut, 3/8 Nyloc
16	E269	Engine, 5 h.p. B&S			
17	1604-168	Pin, Whl Driver 1/4 x 1-1/2 (6)			
18	1916-049	Spring, Ratchet (6)			
19	2302-008	Wheel, Traction Asm. (2)			
	2005-006	Tube, Traction (2) (Not Shown)			
	2003-006	Tire, Traction (2) (Not Shown)			
20	1913-095	Washer, 5/8 Flat (2)			
21	1806-149	E-Ring, 5/8 (2)			
22	1803-016	Ratchet, RH			
23	1604-165	Pin, Roll 3/16 x 1-1/4 HD (2)			
24	0209-082	Bolt, Shoulder (2)			
25	2301-016	Washer, 1/2 Bevel (2)			
26	0214-508	Mount, Rear Wheel RH			
27	1401-129	Pushnut, 3/8 (6)			
28	1913-099	Spacer, Wheel (2)			
29	0214-506	Plate, Axle Mounting (2)			
30	2301-209	Washer, 3/8 Int./Ext. Tooth			
31	1921-012	Support, Clutch			
32	0209-120	HHCS, 5/16C x 1-1/4 G5 (2)			
33	1401-231	Nut, Tinnerman			
34	0209-100	HHCS, 5/16C x 5/8 G5 (4)			
35	1605-126	Plate, Tie (2)			
36	1401-021	Nut, 5/16C Lock (4)			
37	0209-150	HHCS, 5/16C x 2-1/2 G5			
38	0214-517	Mount, Spring			
39	1901-233	Screw, Lift			
40	0502-023	Swivel, Height			
41	1401-130	Nut, 1/4C TLF			
42	0605-900-101	Weldment, Lift			
43	0204-084	Bushing, 5/8 Nylon (4)			
44	1913-102	Spacer, Axle (2)			
45	1904-292	Shaft, Axle			
46	1917-057	Sprocket, 48T			
47	1102-013	Key, 3/16 Woodruff			
48	1901-005	SHSS, 1/4C x 1/4 (2)			
49	0305-027	Chain (54Pt)			
50	1808-315	Link, Front Lift (2)			
51	1808-314	Link, Rear Lift (2)			
52	0502-022	Swivel, 3/8 (2)			
53	0205-010	Belt, Deck / Spindle			

PARTS LIST & INSTRUCTIONS FOR CLUTCH **FOR S22MB1/S22CB1**

hof2
+ Clutch lever Stop Assy

Yazoo Manufacturing Company's policy is to improve its products whenever it is possible and practical to do so. In an effort to keep pace with changes in technology, Yazoo reserves the right to make changes or improvements at any time without incurring any obligation to make such changes on products previously manufactured.

WARNING!

BEFORE PERFORMING SERVICE ON MOWER, TURN ENGINE OFF, AND ALLOW ENGINE TO COOL. DISCONNECT ENGINE SPARK PLUG WIRE AND SECURE IT AWAY FROM PLUG TO PREVENT ENGINE FROM ACCIDENTAL STARTING.

1	1401-021	Nut, 5/16 C Lock
2	1916-197	Spring, Clutch
3	0214-587	Brk't, Spring Anchor
4	0102-204	Arm, Clutch Stop

2. Tools Required:

1/2" Open End Wrenches, Pliers.

REMOVAL AND ASSEMBLY

1. Remove Chain Guard. (not shown)
2. Remove Clip Pin, Clevis Pin and existing Spring, save Clip and Clevis Pin. Discard existing Spring. See figure 1.
3. Assemble Clutch Stop Arm to Clutch Stop Mount with Clevis Pin and Clip Pin. See figure 1.
4. Assemble Spring Anchor Bracket to Engine. (remove nut, lock washer on engine and assemble the bracket to engine with Lock Nut.) See figure 1.
5. Assemble Clutch Cable to Clutch Stop Arm. See figure 1.
6. Assemble Spring to, Clutch Stop Arm and Spring Anchor Bracket. See figure 1.

Note: Spring must be positioned exactly as shown in figure 2. In order to work properly.

7. To adjust Clutch Cable, move nuts on the cable so 3/4" of thread is exposed (See figure 2). When Clutch Stop Arm is in run position and Clutch Outer Release Collar is in position

shown on figure 2 the gap between Clutch Stop Arm and Clutch Outer Release Collar should be 1/16". See figure 2.
 8. Reinstall Chain Guard.

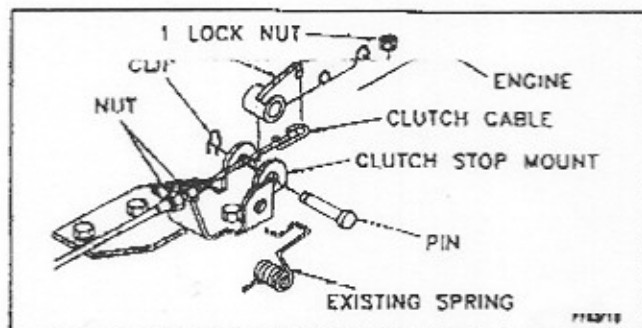


Figure 1.

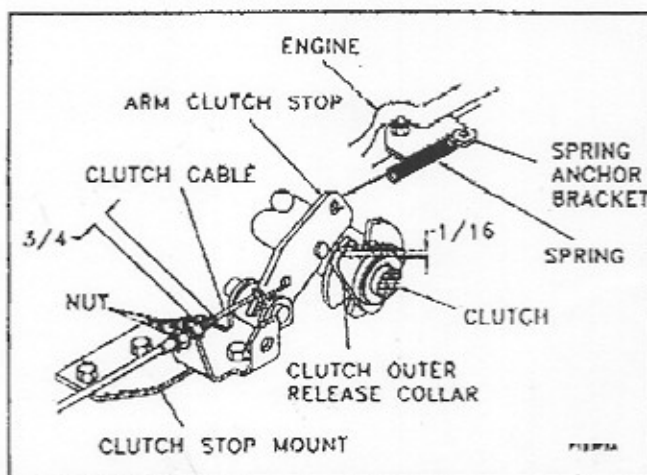


Figure 2.

Kit # 1301-284